


Adjustable Base # ECZ04R8Z Wireless

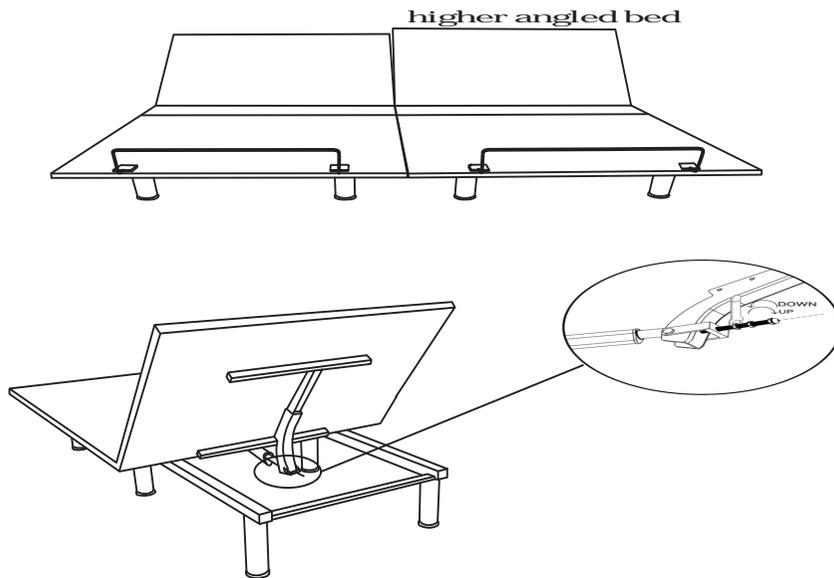

WHEN TWO BEDS DO NOT ALIGN:
on the higher angled bed of the two, use a 19mm wrench to turn the nuts on the new "LEVEL RIGHT" counterclockwise to adjust the angle until the higher angle bed match the level of the lower angle bed and lock the nut with the reinforce nuts.

The two beds are now aligned. (for Twin XL only)

If the foot section of the bed does not go flat after pressing the flat button on the remote control , it can be adjusted by turning the turnbuckle clockwise to raise the foot section or anticlockwise to lower the foot section . The turnbuckle is located on the foot leveler (See figure 10).

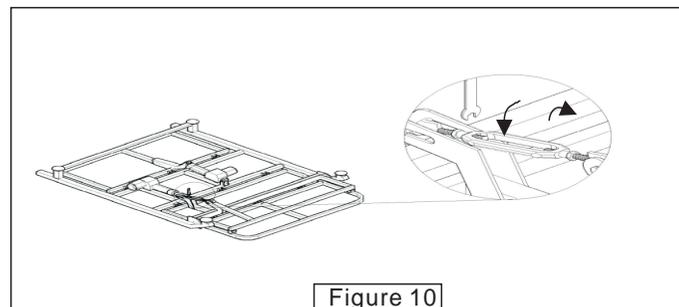


Figure 10



Owner's Manual

INNOVA™

SLEEP SYSTEMS

CONTENTS

Advisory

Setup and Installation

Wireless Hand Control

1-3-10 year Warranty

